


RIVIAL

Via G. Pastore,11 43058 SORBOLO (PR) - ITALIA

AUTOMATIC LUBRICATING PUMP AT 2 DELIVERIES

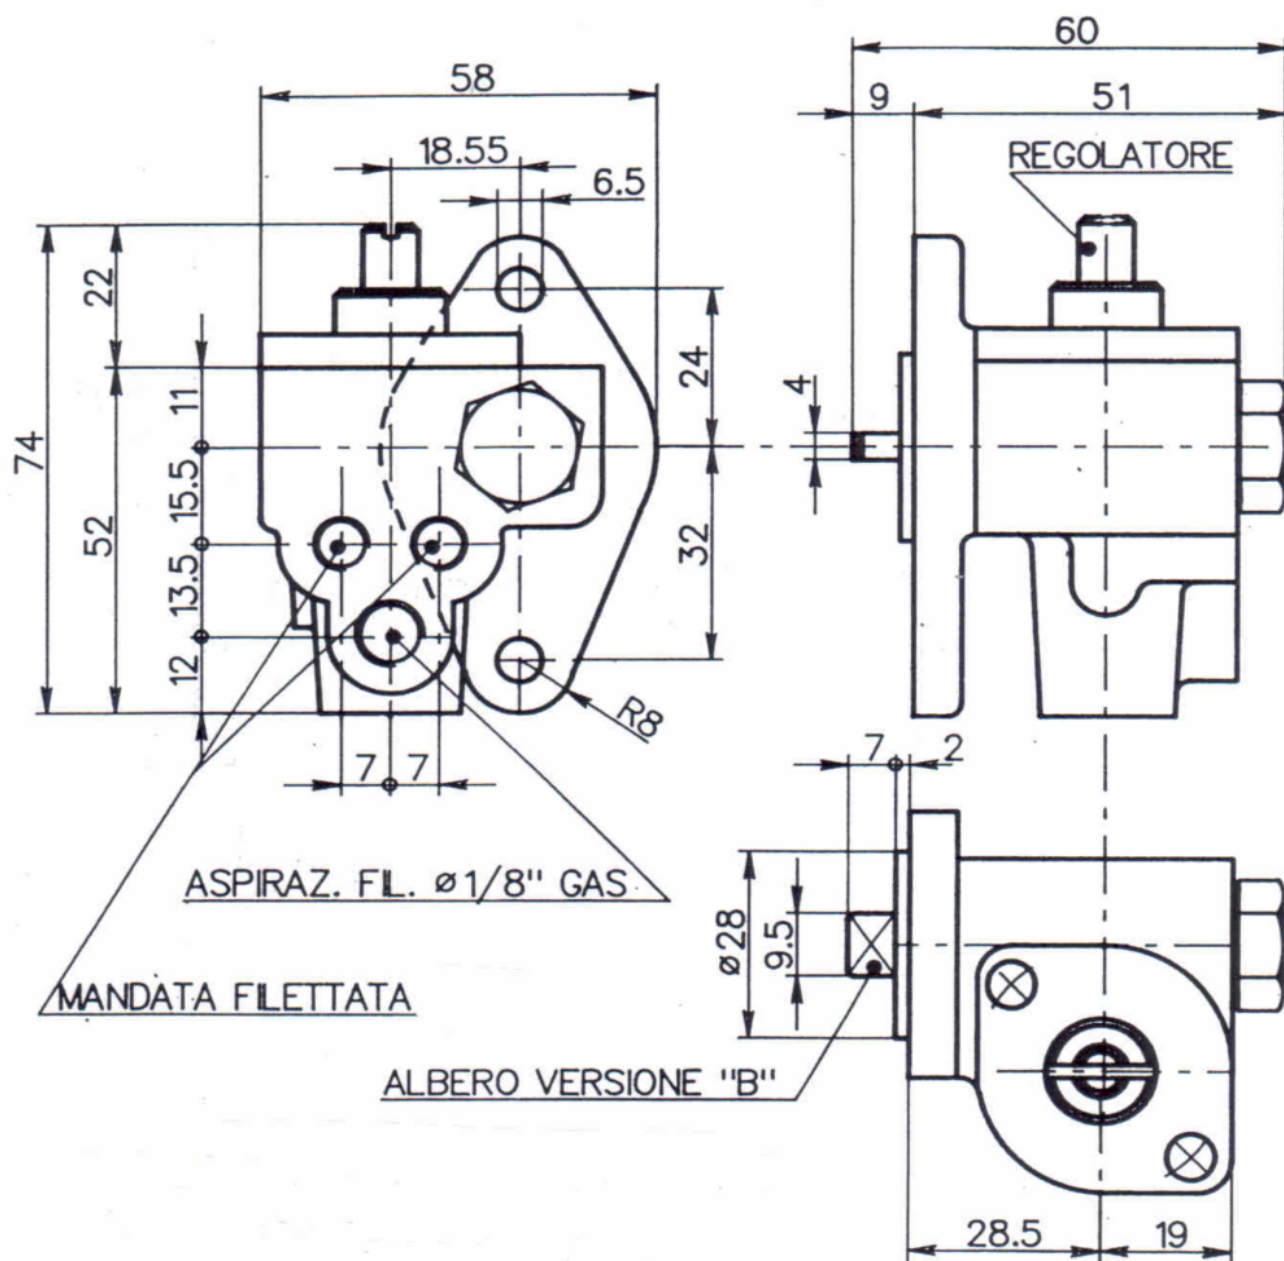

RIVIAL

Via G. Pastore,11 43058 SORBOLO (PR) - ITALIA

AUTOMATIC LUBRICATING PUMP AT 2 DELIVERIES

TECHNICAL DATA AND INSTRUCTIONS

Total capacity	g/h	0-360
Max Rev.	n/min	2000
Ratio	R	33:1
Deliveries	N°	2
Max pressure	bar	2,5
Max suction height	mm	250
Piston diam.	mm	7,17
Suction hose diam.	mm	6x4
Delivery hose diam.	mm	4x2
Weight	kg	0,570
Delivery hole	/	1/8" G
Suction hole	/	1/8" G

HOW TO USE IT

The automatic lubrication pump doesn't require any special maintenance during operation. Always make sure to have oil into the machine feed tank and at least every 5-6 months check lubricating oil/grease level into the pump tank under the cover; if required add oil/grease without completely fill the tank.

LUBRICATING FLOW CONTROL


In case you need a lower or higher oil delivery, operate the register pin. Turn clockwise to have a lower oil delivery (-); turn anticlockwise to have a higher oil delivery (+).

In order to do this operation unscrew the cover and loosen the nut.

RIVIAL

Via G. Pastore,11 43058 SORBOLO (PR) - ITALIA

AUTOMATIC LUBRICATING PUMP AT 2 DELIVERIES

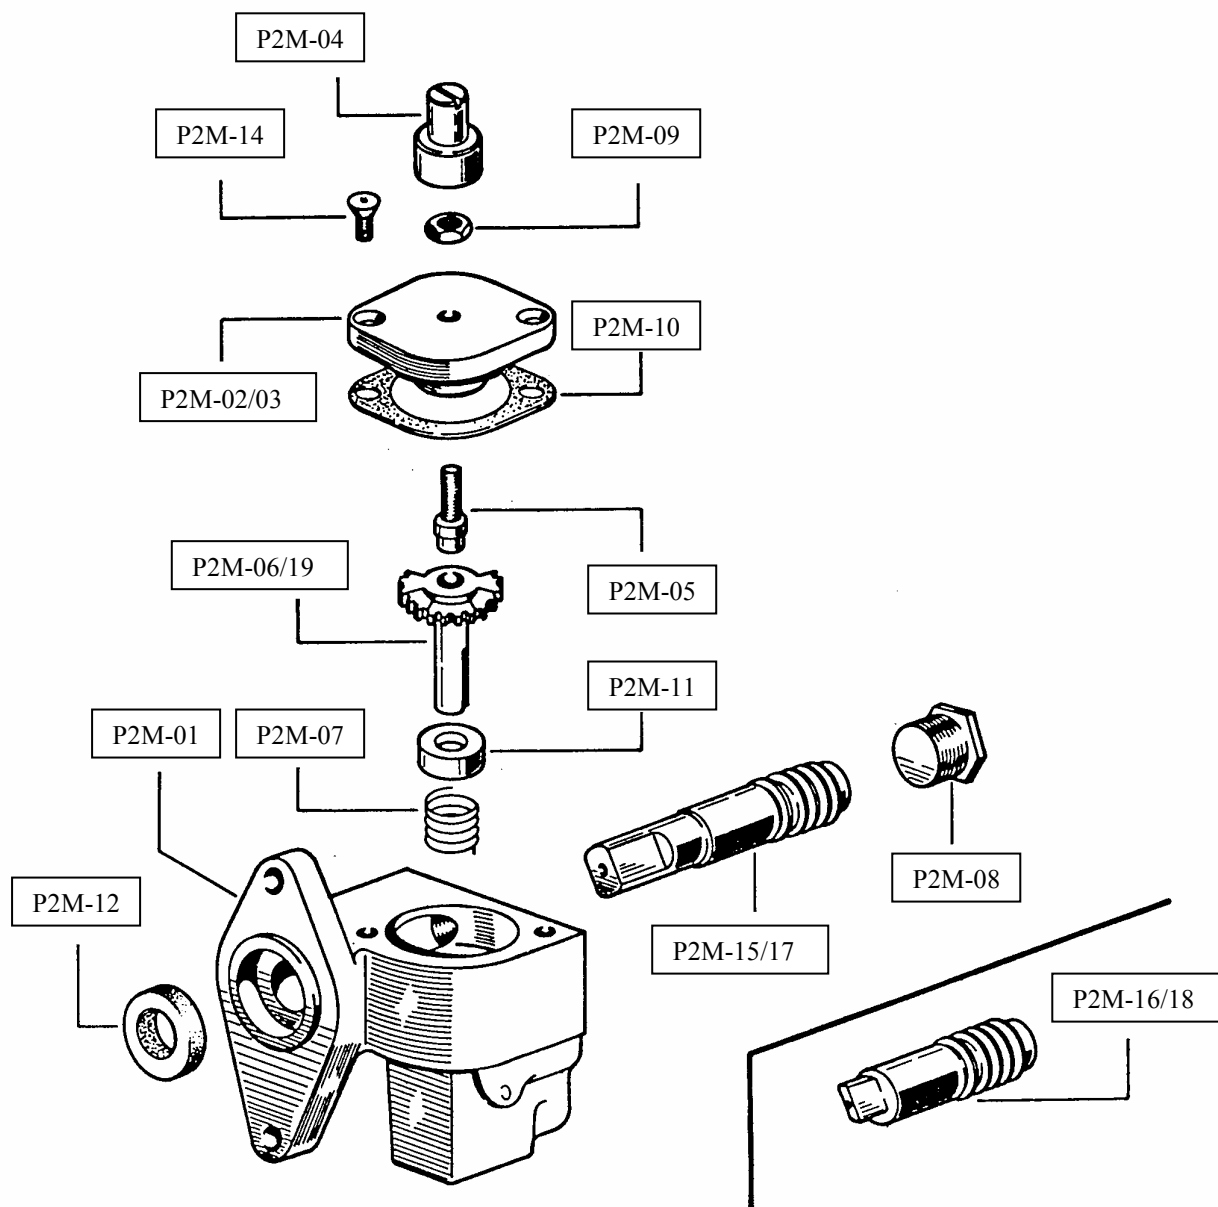

SPARE PARTS CATALOGUE AUTOMATIC LUBRICATING PUMP AT 2 DELIVERY

Via G. Pastore,11 43058 SORBOLO (PR) - ITALIA

SPARE PARTS CATALOGUE AUTOMATIC LUBRICATING PUMP AT 2 DELIVERY

[illegible]